

JAMMA 72pin connector			
pin	Part Side		Solder Side
1a		1b	
2a		2b	
3a	SPEAKER	3b	GND
4a	HOLD1 SW	4b	BILL ACCEPTOR (PULSE)
5a	HOLD 2 SW	5b	
6a	HOLD 3 SW	6b	
7a	HOLD 4 SW	7b	
8a	HOLD 5 SW	8b	
9a	START SW	9b	
10a	BET ONE SW	10b	
11a	SELECT GAME SW	11b	
12a	AUTO START SW	12b	
13a		13b	
14a	MAXBET SW	14b	
15a	INFO SW	15b	
16a	FRONT DOOR (SERVICE) SW	16b	
17a		17b	
18a		18b	
19a		19b	
20a	KEY ATTENDANT SW	20b	
21a	COLLECT SW (PAYOUT BUTTON)	21b	
22a		22b	
23a		23b	SELECT GAME LAMP
24a		24b	WBA LED
25a	REMOTE&BILLS COUNTER	25b	UPPER LAMP BLUE
26a	GAMES COUNTER	26b	UPPER LAMP WHITE
27a	HANDPAY COUNTER	27b	WIN COUNTER
28a		28b	BET COUNTER
29a	HOLD 1 LAMP	29b	BET ONE LAMP
30a	HOLD 2 LAMP	30b	MAXBET LAMP
31a	HOLD 3 LAMP	31b	COLLECT LAMP
32a	HOLD 4 LAMP	32b	
33a	HOLD 5 LAMP	33b	AUTO START LAMP
34a	START LAMP	34b	INFO LAMP
35a		35b	
36a	GND	36b	GND

SW - switch, the button of vehicle is connected to the pay of controller through a socket JAMMA 72pin.

LAMP - a lamp is proper the button of vehicle.

COUNTER - outputs of meters.

FRONT DOOR (SERVICE) SW - normally-opened contact of door, if a door is opened - connected to the GND.